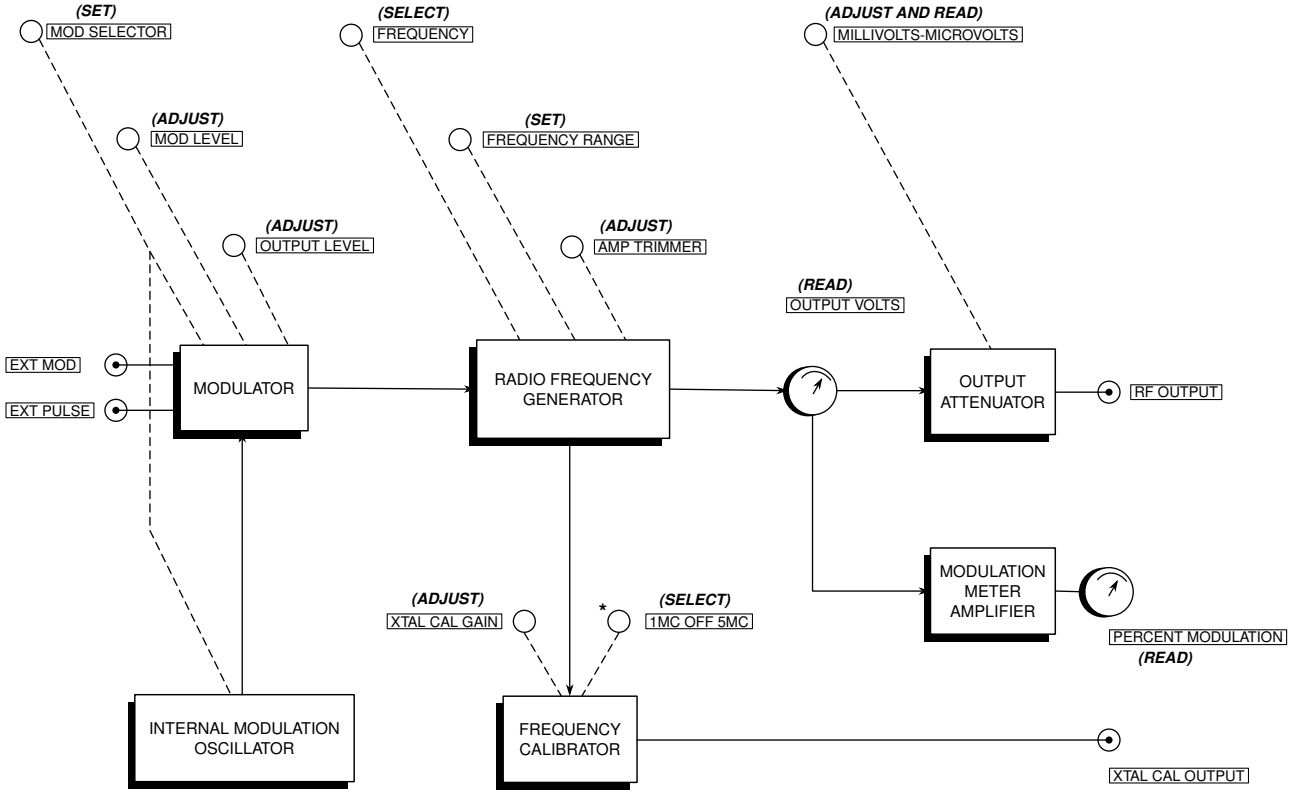

(SET)
MOD SELECTOR
(SELECT)
FREQUENCY
(ADJUST AND READ)
MILLIVOLTS-MICROVOLTS
(ADJUST)
MOD LEVEL
(SET)
FREQUENCY RANGE
(ADJUST)
OUTPUT LEVEL
(ADJUST)
AMP TRIMMER
(READ)
OUTPUT VOLTS
EXT MOD
EXT PULSE
MODULATOR
RADIO FREQUENCY GENERATOR
OUTPUT ATTENUATOR
RF OUTPUT
MODULATION METER AMPLIFIER
PERCENT MODULATION
(READ)
(ADJUST)
XTAL CAL GAIN
*
(SELECT)
1MC OFF 5MC
INTERNAL MODULATION OSCILLATOR
FREQUENCY CALIBRATOR
XTAL CAL OUTPUT
*USED ON TS-510A/U ONLY